


# RoughDeck® HP and SS

Portability Frames

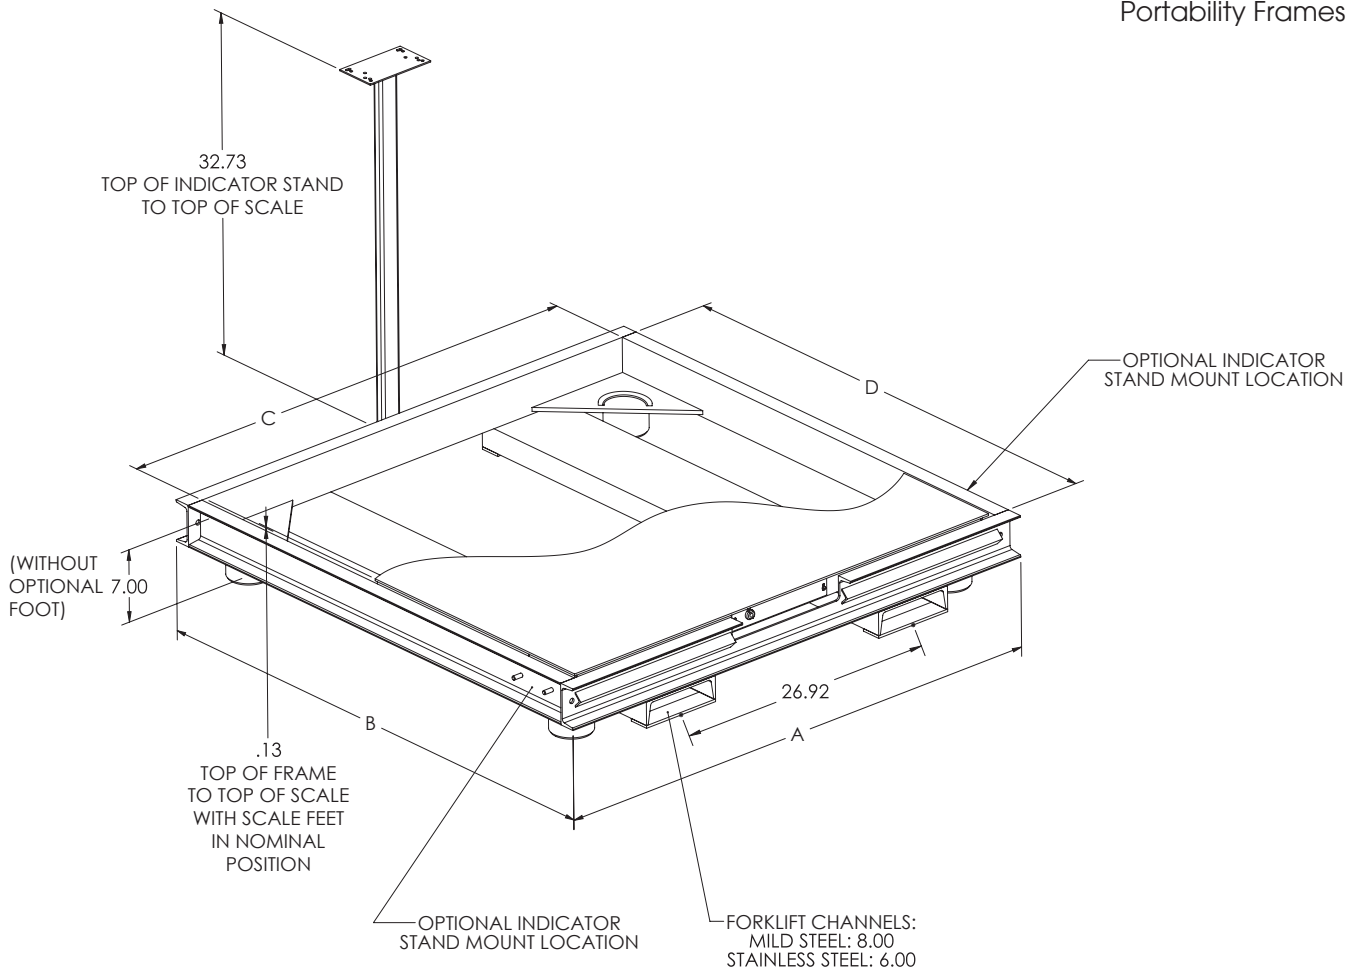

## Part Number/Price

Part #	Size (W x L)	Est. Weight	Price
<b>RoughDeck HP Portability Frames</b>			
164492	4 ft x 4 ft, up to 10,000 lb capacity, floor stand for indicator 36.3 in high, indicator stand mounting bracket	275 lb	Consult
164493	5 ft x 5 ft, up to 10,000 lb capacity, floor stand for indicator 36.3 in high, indicator stand mounting bracket	400 lb	Consult
<b>RoughDeck SS Portability Frames</b>			
164494	4 ft x 4 ft, up to 10,000 lb capacity, floor stand for indicator 36.3 in high, indicator stand mounting bracket	275 lb	Consult
164495	5 ft x 5 ft, up to 10,000 lb capacity, floor stand for indicator 36.3 in high, indicator stand mounting bracket	400 lb	Consult

NOTE: Indicator stand mount bracket works with 120/120 Plus, 882IS/882IS Plus, 882IS/882IS Plus w/battery, 880/880 Plus, 480/480 Plus, 482/482 Plus, 680 Synergy

NOTE: Consult factory if you intend on using with a pallet jack.

## Options

Part #	Size (W x L)	Est. Weight	Price
<b>Options</b>			
74574	SST, Captured Ball Foot 3.00in diameter 1/2-20 UNF thread with jam nut	—	Consult

## Portability Frame Dimensions

<b>4 ft x 4 ft</b>		
A	Mild steel: 51.92 in (1,318 mm)	Stainless steel: 52.75 in (1,339 mm)
B	Mild steel: 51.92 in (1,318 mm)	Stainless steel: 52.75 in (1,339 mm)
C	48.75 in (1,238 mm)	
D	48.75 in (1,238 mm)	
<b>5 ft x 5 ft</b>		
A	Mild steel: 63.92 in (1,623 mm)	Stainless steel: 64.75 in (1,644 mm)
B	Mild steel: 63.92 in (1,623 mm)	Stainless steel: 64.75 in (1,644 mm)
C	60.75 in (1,543 mm)	
D	60.75 in (1,543 mm)	
<b>Distance from floor to inside of strap on the fork entry (without optional foot)</b>		
	Mild steel: 3/4 in	Stainless steel: 1/2 in
<b>Distance from inside of strap to top of the fork entry (without optional foot)</b>		
	Mild steel: 2 in	Stainless steel: 2 1/4 in